



# USER MANUAL

Fitness exercise treadmill

Infrared heating and vacuum resistance technology





# Introduction

The present Operation Manual contains the description of the VacuStar fitness exercise treadmill (hereinafter referred to as "Equipment" or "VacuStar"), the principles of its functioning, its technical characteristics and the user manual. While mounting and operating the Equipment the users are required to follow all electric safety rules and safety requirements.

**Attention !!!** This User Manual is an integral part of equipment operation and customer needs to review before start operate equipment! Please read this manual carefully before operating the equipment. Here you can find important information relating to the safety of the Equipment, its operation and maintenance and also description of all the operation treatments. Please keep this manual on site for future reference. The warnings referred in the manual are aimed at ensuring safe operation of the equipment, so that safety features provided by the Manufacturer are not violated due to mistakes and omissions in mounting or in operation practices.

Another purpose of these warnings is to alert the Consumer and the service personnel to the safety issues. The present manual provides an introduction to the Equipment and detailed rules of operation, mounting and maintenance, which ensure its trouble-free and safe operation and continuous service if observed.

If the Equipment is a subject to resale or passed to another owner and/or to be relocated, please make sure that the manual is transferred together with the Equipment. Manufacturer advises to contact technical departments authorized by Manufacturer for any installation, disassembling, assembling or maintenance works. Please also notify the Manufacturer/Dealer so that an authorized representative may supervise dismounting of the Equipment, its transition and installation in a new location.

If the Equipment is subject to demolition, the parts of the Equipment, which may be potentially dangerous, should be recycled according to the provisions of the national environmental legislation.

**ATTENTION!** Only the certified personnel trained by the Manufacturer or his authorized representative with issued by Manufacturer certificate of training is allowed to operate and service of the Equipment.

## **CAUTION! VIOLATION OF SAFETY RULES DURING OPERATION OF THE EQUIPMENT MAY LEAD TO ACCIDENTS.**

By buying equipment from Manufacturer or any distributor's companies, Customer (Owner of equipment) agrees by default to accept next rules and liabilities: by the execution of purchase agreement of equipment, an owner of Equipment accepts and assumes full responsibility for any and all injuries, damages (both economic and non-economic), and losses of any type, which may occur to owner of Equipment or their guests. Owners of Equipment hold solely responsible for safety and well being of their guest and themselves. Owner of Equipment **MUST** provide **SUPERVISION** during cryotherapy sessions by trained and certified employees, which were instructed by Manufacturer's and nitrogen supplier's representatives for the safety use equipment in the facilities. Owner of equipment **MUST** comply with all rules imposed by the Manufacturer regarding the use, maintain, and storage Equipment in any facility and agrees to conduct myself in a controlled and reasonable manner at all times, and to refrain from using any equipment in a manner inconsistent with its intended design and purpose.

Owner of equipment understands and acknowledge that the use of exercise and wellness equipment involves risk of serious injury, including permanent disability and death. **MANUFACTURER** advises that business activity using Equipment could require business liability insurance or special permit depends from local codes and requirements.

**CUSTOMER (OWNER OF EQUIPMENT) NEEDS TO READ THE FOREGOING USER MANUAL WITH FULL KNOWLEDGE OF ITS CONTENT.**




## Symbols and Conventions used in User Manual

### Read instructions before use!

**Note:** Describes how equipment functions or provides a note on how best to use it. **Caution:** Refers to the safe operation of equipment and provides cautions where the possibility of loss of data or damage to the equipment exists.

**Warning:** Indicates a situation in which the operator or the patient may be in danger of injury or death,

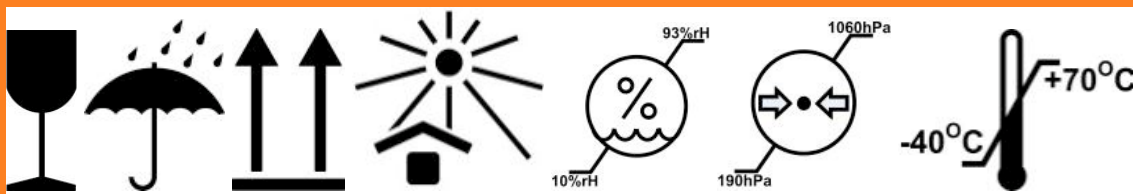

Notes on package: Fragile, handle with care, Keep dry, This side Up, Keep away from sunlight, Transportation Humidity limitation, Transportation Atmospheric pressure limitation, Transportation Temperature Limitation



Notes on machines: Alternating current (power), #ON" (power) , #OFF" (power) , Do Not Wash or wet cleaning



#### ATTENTION:

Before starting to assemble and use the device, please read the User manual and warnings. Obey and follow all warnings and cautions given in this manual. Comply with all approved and established precautions for operating electrical and mechanical equipment.

#### WARNINGS:

The device must be connected to a grounded socket if it is connected the power supply. There is exact information about the required voltage on the label. **Warning: Electric Shock Hazard** To prevent electric shock when using equipment, connect the machine only to supply mains with protective grounding. **Warning:** Do not use the equipment in the presence of flammable material. **Warning:** no chains or tacks or laces on moving elements. It should bring body injuries and suffocation. **Warning:** Do not autoclave any part of equipment system with steam or ethylene oxide. Do not immerse in liquid or allow liquid to enter the interior of any part. **Warning:** Do not use the equipment, any parts thereof, or any accessories if they have become wet or exposed to liquids. **Warning:** Do not modify any part of the equipment system. **Warning:** Do not service or maintain any part of the equipment system during use by a patient. **Warning:** Use the equipment system only in accordance with professional instructions or proper operation! **Warning:** The equipment system includes small and moving parts. To avoid injuries, do



not swallow, and keep away from children. Warning: Stop treatment in case of any change of the equipment system performance. Warning: dry or wet/half dry clean up (disinfect) surfaces of equipment after each client session. Not disinfected surfaces of machine should carry over virus and bacterias to other customers

Caution: Use only cables and accessories approved by manufacturer authorized representative. Other cables and accessories may damage the system or interfere with the measurements. Do not change software settings or upload third-party software updates. Caution: Do not store or transport the equipment system beyond the specified temperature ranges -40 to 70°C (-40 to 158°F) Caution: Do not use the equipment system beyond the specified temperature range: 10 to 30°C (50 to 86°F Caution: Do not use the RollStar system beyond the specified humidity range: 30% -85%, non- condensing Caution: To prevent any damage to the equipment system, keep it away from dust, lint, and dirt. Keep away from sources of heat or moisture. Keep away from pets. Caution: Use the equipment system up to 3000m above mean sea level. Caution: To prevent any damage to the equipment, use only accessories, detachable parts and materials described in this user manual. Caution: While in use, place the machine on horizontal, firm surface only. Do not place the machine on bed, blanket, mattress, pillow, or soft furniture. Do not cover the machine. Caution: Do not operate the equipment system during transit. Caution: Disconnect the machine from electrical outlet before cleaning. Let it dry completely before reconnecting it to the electrical outlet.

**Note: A client can be an intended operator of the InfraStar.**

- The device is subject to the recycling process. Dispose of electrical parts only to containers designated for this purpose or return them to a nearby waste collecting centre.
- The device needs to be placed on a smooth surface.
- Make sure that the electric wire is not damaged. Do not touch electrical wires, parts or motor. High voltage shock warning.



- Keep hands away from the drive belt and wood rollers when the drum is moving. Machine has automatic sensors which stop machine when hand detected under drum.
- All types of repairs should be performed by an authorized service center.

**Technical specifications**

- Voltage Power consumption 230VAC / 50Hz / 1PH 1.5kW European version
- Voltage Power consumption 120VAC / 60Hz / 1PH 3.0kW American version



### Technical specifications

#### Power:


|                   |  |
|-------------------|--|
| Voltage           | 230VAC / 50Hz / 1PH<br>110VAC/60Hz/1PH       |
| Power consumption | 1.5kW for 220V version/ 3kW for 110V version |

#### Functions:

|              |  |
|--------------|--|
| Infrared     | <ul style="list-style-type: none"> <li>• Temperature adjustment: 25 – 50°C,</li> <li>• Two infrared radiators: 500W each,</li> <li>• Protection against scalding,</li> <li>• The range of infrared radiation: 1.4 - 14 <math>\mu\text{m}</math> – close to the solar radiation,</li> </ul> |
| Vacuum       | <ul style="list-style-type: none"> <li>• 5 predefined programs: 0 – 30mBar,</li> <li>• A function to adjust the vacuum manually,</li> <li>• A vacuum pump, 500W,</li> </ul>  |
| LED          | <ul style="list-style-type: none"> <li>• Based on LED technology,</li> <li>• Wireless remote control allowing to choose the colour,</li> <li>• Predefined programs for automatic colour change,</li> </ul>   |
| Aromatherapy | <ul style="list-style-type: none"> <li>• An automatic dosing station with essential oils for the THERMAL operation mode,</li> <li>• An option to turn on/off the aromatherapy during the training,</li> </ul>  |
| Collagen     | <ul style="list-style-type: none"> <li>• double LED lamp, 30W,</li> <li>• Wavelength – 620nm,</li> <li>• An option to turn on/off during the training,</li> </ul>  |



## Dimensions of VacuStar indicated in cm metric system on image

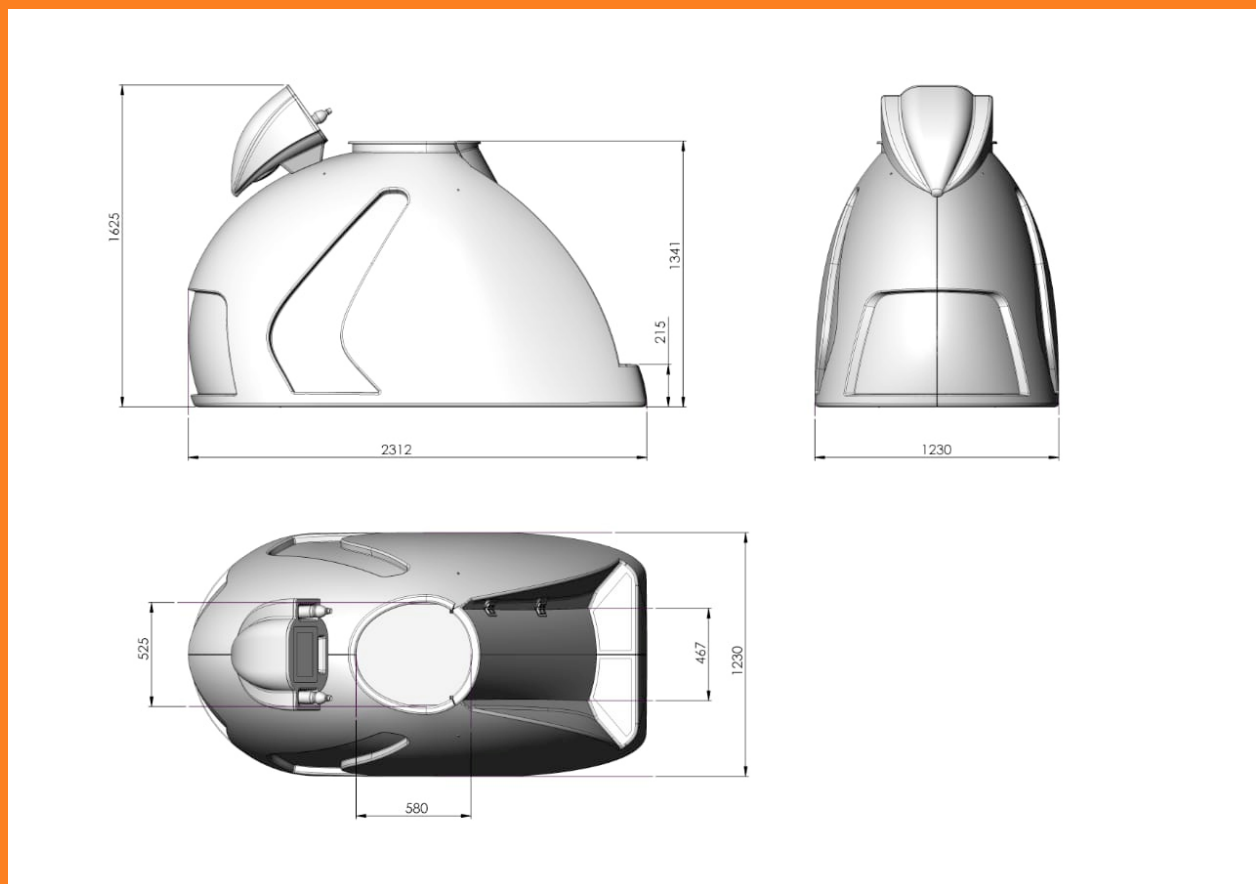

### Description of set:

VacuStar comes with set included 1 exercise bike, 1 pillow, 5 skirts (sizes S, M, XS, L, XL) Versions: SIMPLE with 10.1" touch screen, vacuum resistance & infrared heating functions, GRAND with 10.1" virtual reality display, vacuum resistance & infrared heating functions, aroma therapy, red collagen lamp, WiFi connection.

## Installation and assembling requirements:



Remove packing crate and take out VacuStar from crate. Lift up equipment. Check legs on bottom.

Packing crate on pallet. Dimensions 260x130x180cm 350kg netto 400kg brutto with crate

Box with 5 skirts and aroma container locates inside.




## Equipment should be disassembled on two parts.

- Unscrew bolts on door hangers
- Unscrew plastic part inside capsule
- Disconnect wires
- Unscrew and remove top part with display
- Contact technical support for any assistance

Plug in to electrical outlet and turn on switch.

## Before starting training on VacuStar bike

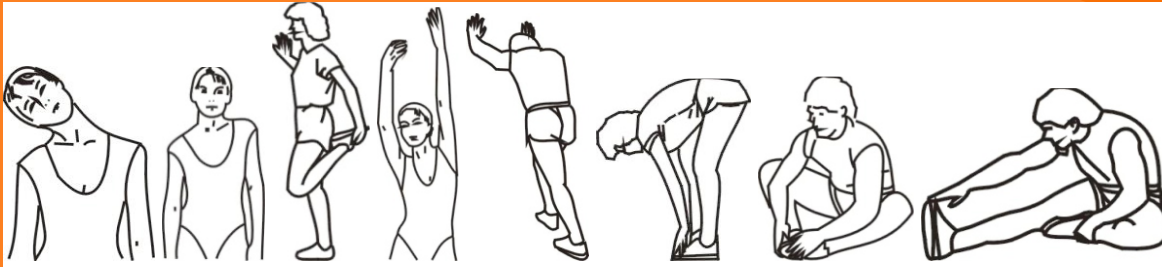

Training on equipment begin with body muscle warm-up. Next step to aerobic exercises showed on images above. After exercise on equipment you need get muscle relaxation. Warming up prepares the body for exercises on equipment. Upon completion of training, repeat the exercises to relax the muscles after each exercise. Below are examples of exercises to warm up and relax:

### **HEAD TURNS**

Move your head to the right and left, to feel a gentle stretch of neck muscles. Then move your head forward and backward, touch the chest with your chin, and tilt the head back. Repeat the exercise several times.

### **ARMS INCLINATIONS**

Lift your right arm towards your ear then lift your left arm. Repeat the exercise several times.

### **QUADRICEPS STRETCH**

Put your hands on the wall in steady position and pull your leg to the buttocks, as shown in the figure above. Repeat the exercise for both legs.

### **STRETCHING**

Reach as high as you can with your hands. Alternately reach up with your left and right hand. Repeat the exercise several times with the right and left hand.

### **STRETCHING THE ACHILLES TENDON**

Put two hands against the wall and lean forward. With one leg make a stride and gently push your body. Repeat the exercise several times on both legs.

### **BENDS**

Touch your toes with your hands. During the bends, keep your knees straight, shoulders and arms relaxed. Repeat the exercise several times.

### **ABDUCTOR STRETCHING**

Sit on the ground, put your feet together, and try to touch the floor with your knees. Repeat the exercise several times.

### **HAMSTRING STRETCHING**

Sit on the ground, straighten one leg, and bend the second one. Reach out a hand towards the extended leg and hold on to this position for a few seconds. Relax and repeat on the other leg.



## Start operation

- Pull up top part
- Dress skirt under the chest
- Step inside capsule with treadmill
- Close door
- Hook on (attach) skirt on plastic frame
- Start program








## Programs and Operation via touch screen display

### Other terms of Operation and Maintenance


Start program Follow program and image on display.

### Starting an exercise program


Press Turn On/Off switch located on back part of plastic near electric cable entrance.

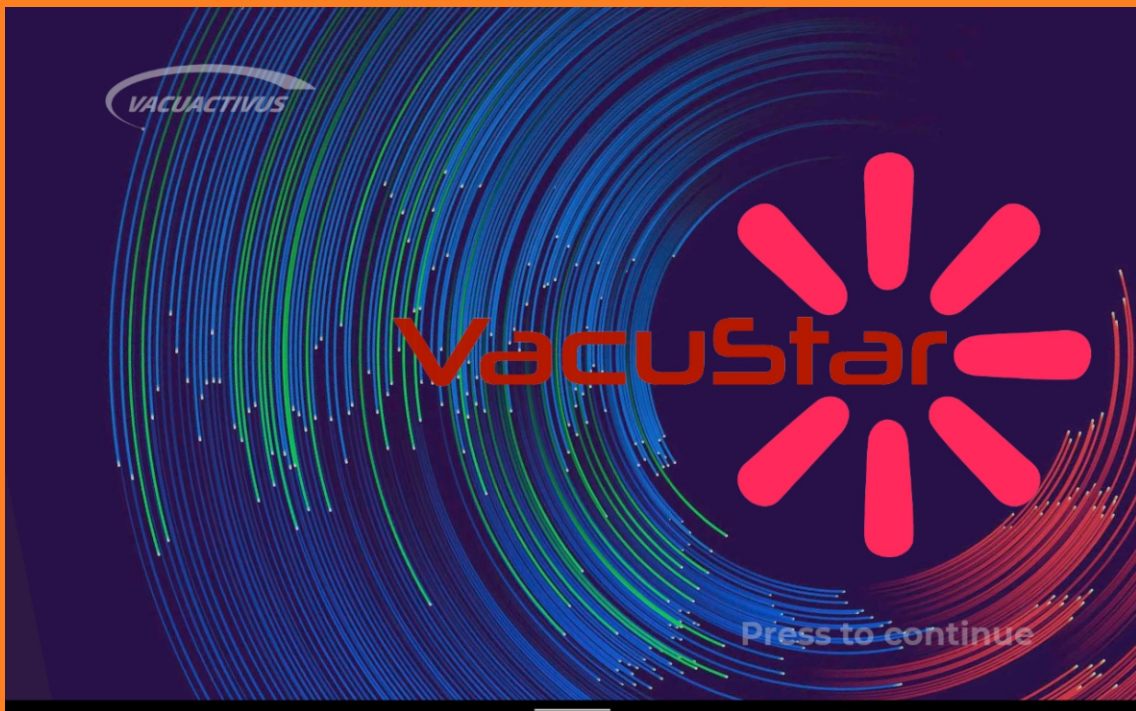


Press continue

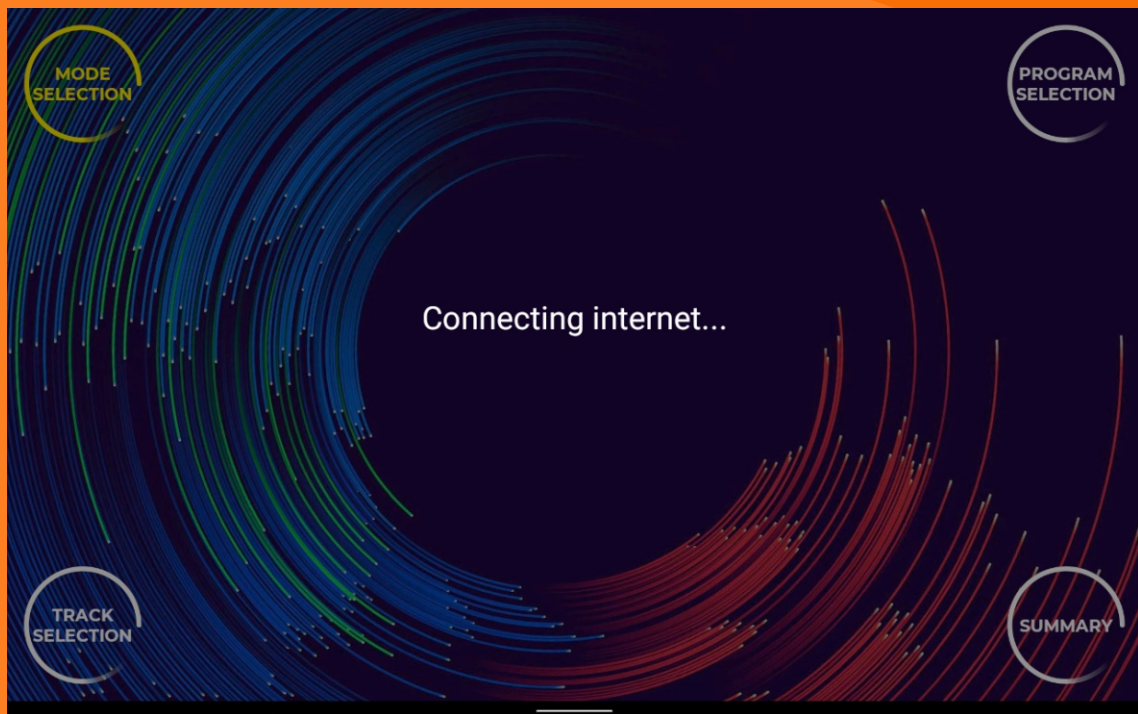

Treadmill needs to be connected to WiFi and speed internet at least 2MB. Offline mode is working 90 minutes and machine is locked until WiFi connected.

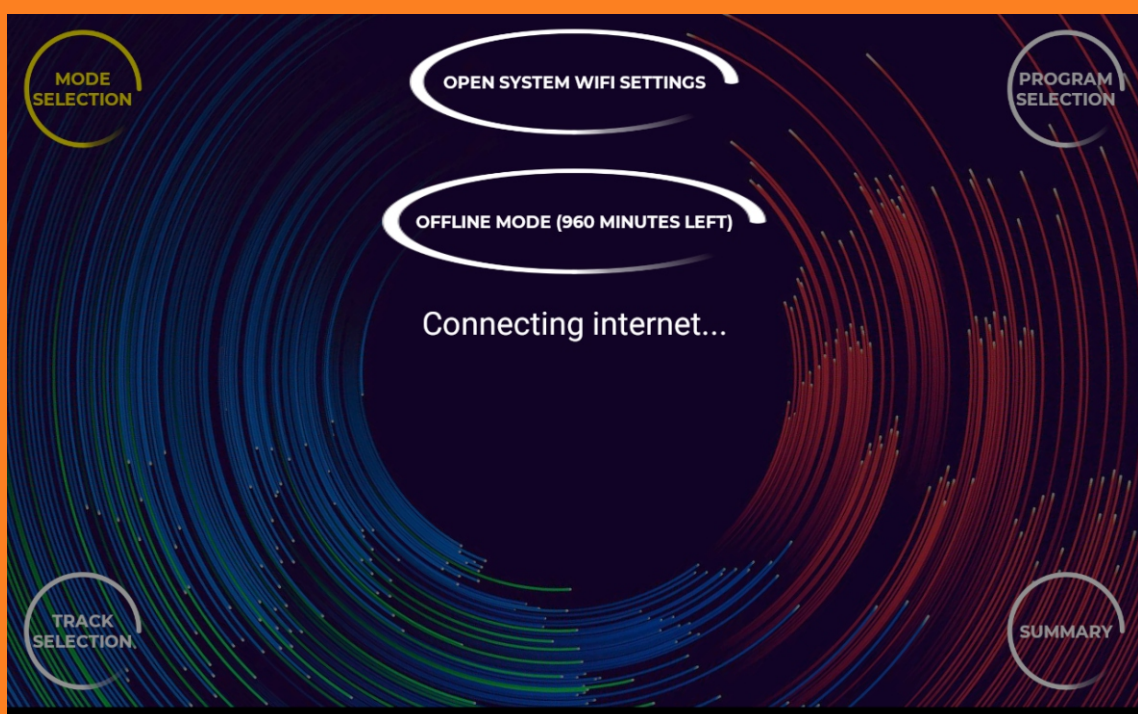



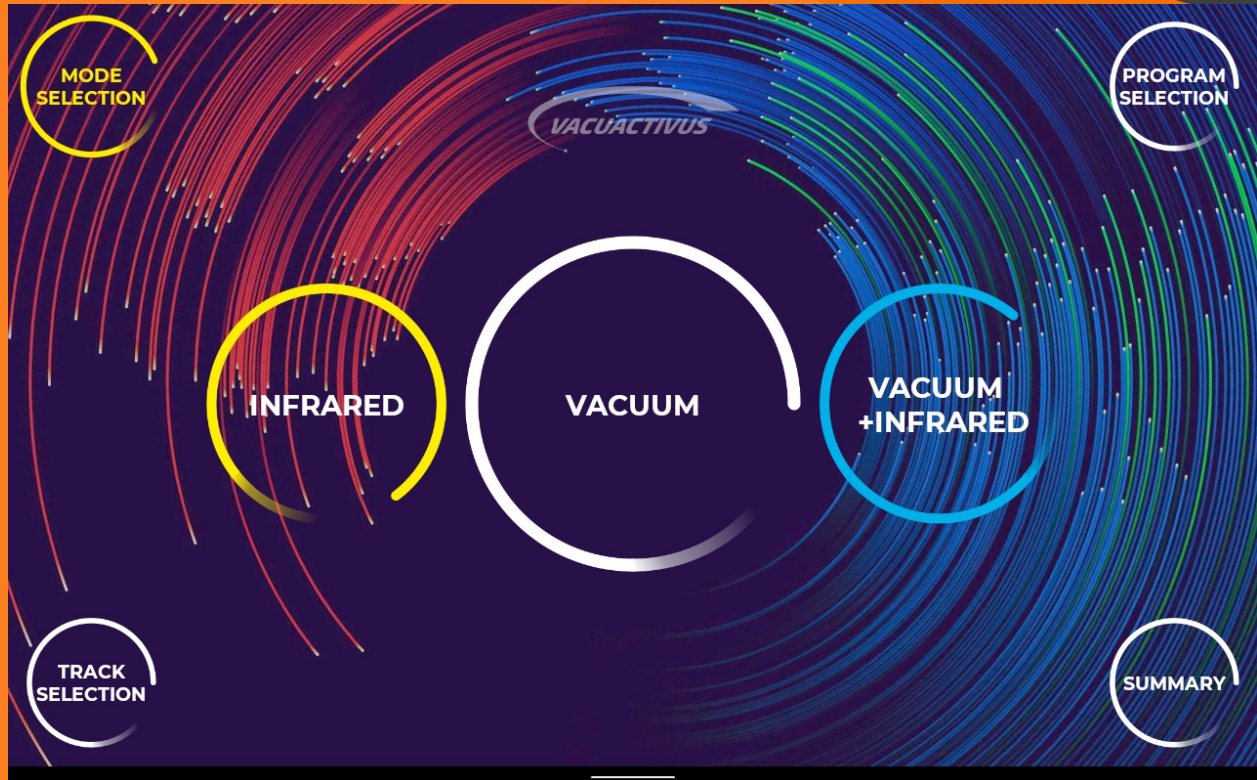

After pressing [SELECT WORK MODE] on the main screen, a work mode choice screen will appear.

### Selecting work mode

There are three options on the [SELECT WORK MODE] screen:

- [TRAINING IN VACUUM AND INFRARED] – selecting training in vacuum and infrared option,
- [TRAINING IN INFRARED] – selecting training in infrared option,
- [TRAINING IN VACUUM] – selecting training in vacuum option,

After choosing a work mode, a screen with a selection of training programs [SELECT PROGRAM] will be displayed.





## Trainingprogramselection

Depending on the selected work mode, there are five (if only infrared work mode was chosen) or six (for other work modes) training programs:


- [MANUAL] – the user chooses the duration of the training on his own. After choosing this program, the user will be asked to set the duration of the training. Maximum duration of a training session – 60 minutes.
- [SOFT WALK] – program dedicated to people who are first time users of Vacu devices and people starting fitness trainings,

Features of [LIGHT WALK] training:

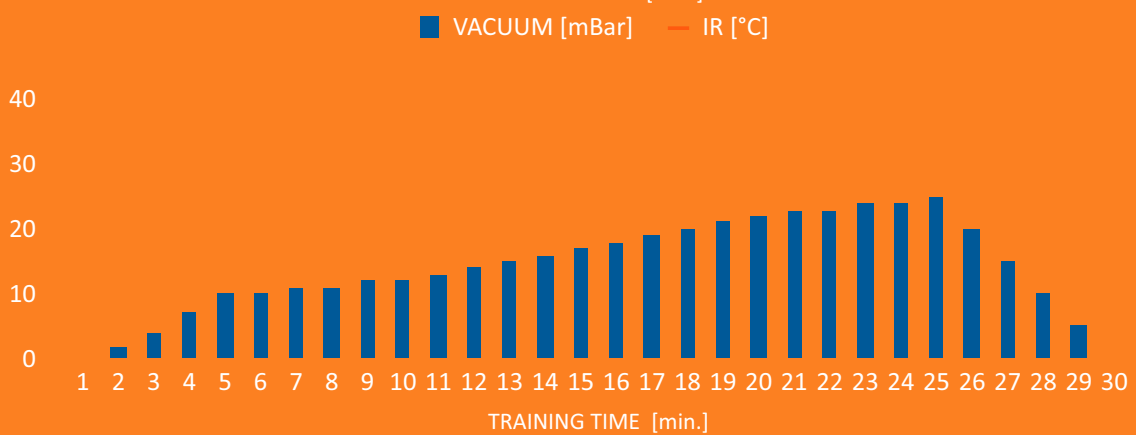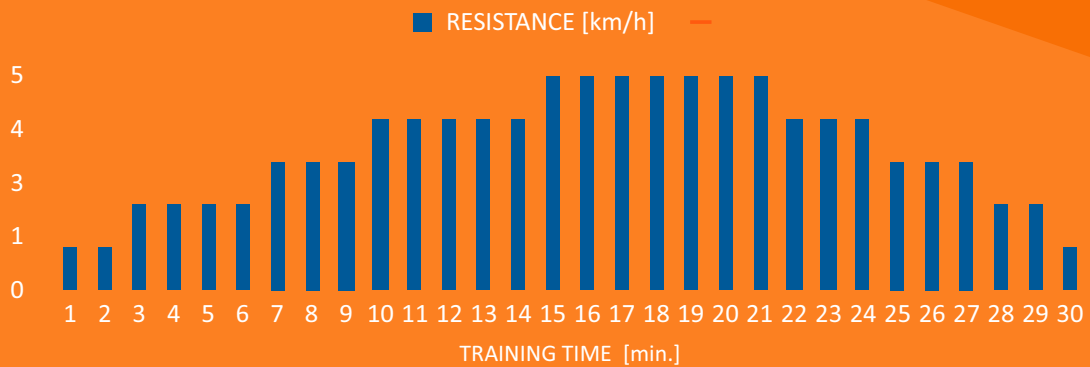


- **[AEROBIC]** – program dedicated to people who do sport and for whom training on a treadmill is not enough.


**Features of [AEROBIC] training:**

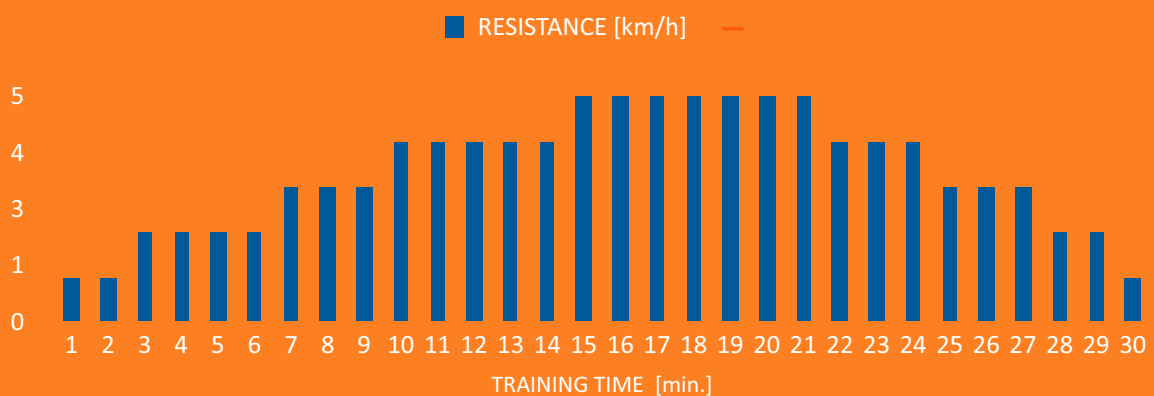





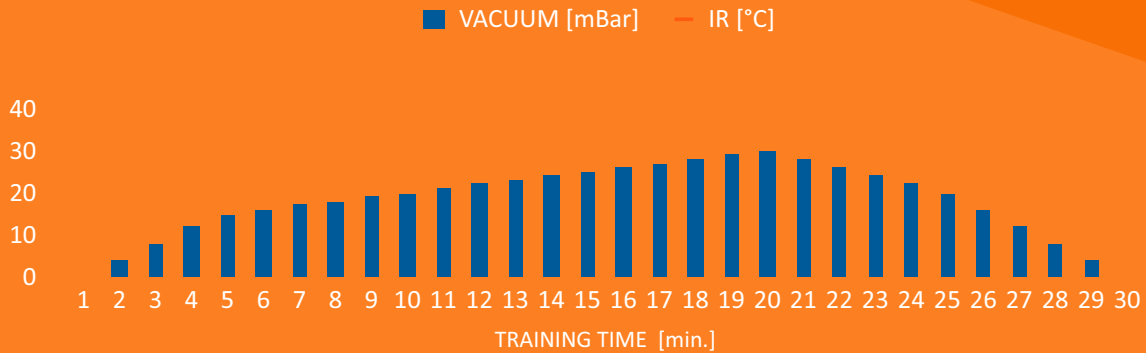

- **[FAST BURNING]** – program dedicated to people who want to get rid of excess body fat and cellulite,
- **Features of [FAST BURNING] training:**

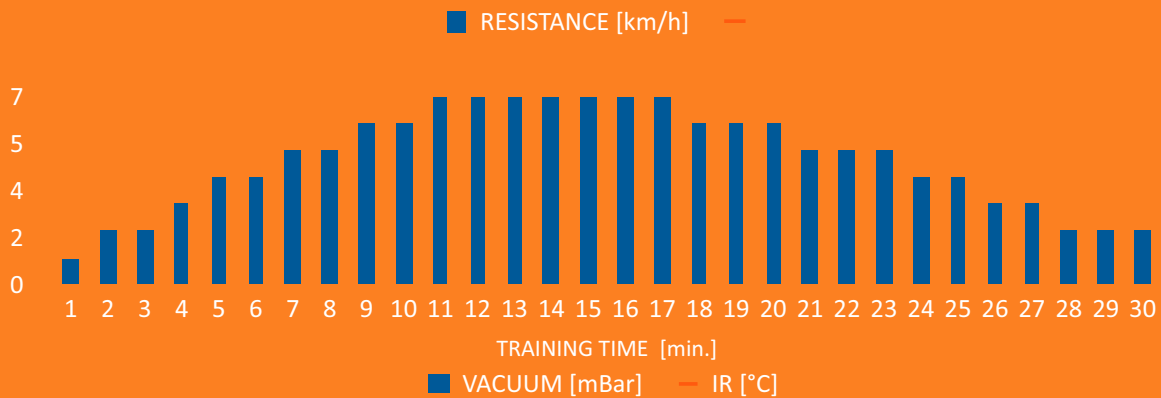


- **[HEAVY TRAINING]** – program dedicated to the most demanding users. Note – the program requires previous experience in fitness trainings,
- **Features of [HEAVY TRAINING] training:**

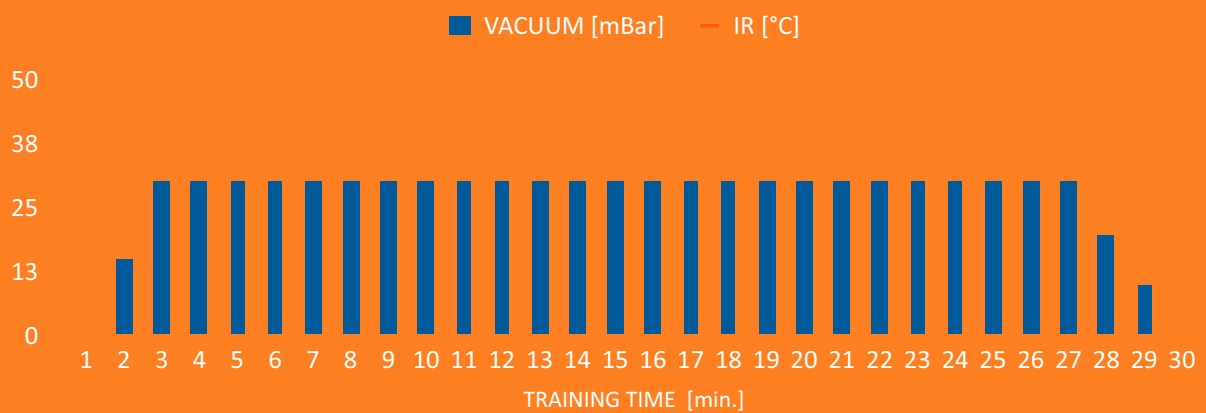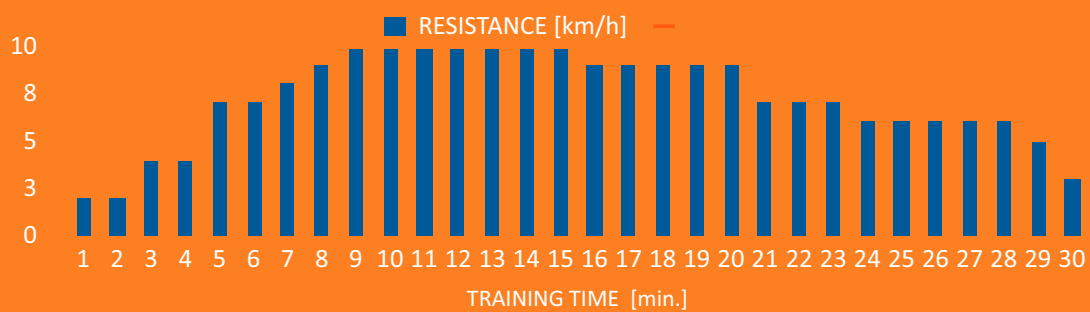

- **[MPHATIC DRAINAGE]** – program for the more effective elimination of cellulite and body fat. The program is only available when vacuum work mode was chosen earlier. After selecting this program, the user will be asked to choose the minimum and maximum value of vacuum. The higher the difference between the two values, the harder the training.
- **Features of [LYMPHATIC DRAINAGE] training:**



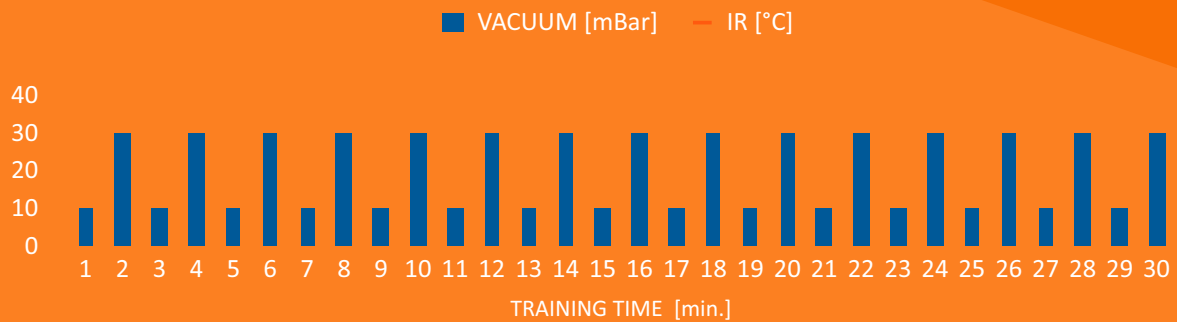

## Training

- The duration of training is predefined and equal to 30 minutes apart from the [MANUAL] program, for which the user can set the duration on his own,
- 
- After pressing [START], the training session will start,
- 
- The user can turn on/off the function of photo rejuvenation – [COLLAGEN] and breeze function – [AROMA],
- 
- During the training, the following parameters will be displayed:
  - Resistance,
  - Value of vacuum,
  - Infrared intensity,
  - Calorie counter,
  - Time left until the end of the training,
  - Distance.
- 
- Additionally, it is possible to modify:
  - Resistance,
  - Vacuum value,
  - Infrared intensity.




- After completing the training session or pressing [stop], the training will be stopped and a summary screen will be displayed
- Track selection press narrows to choose track
- Customs video & audio









Choose Time, Vacuum, Infrared, Loading (incline), Speed via scroll by finger Press Start

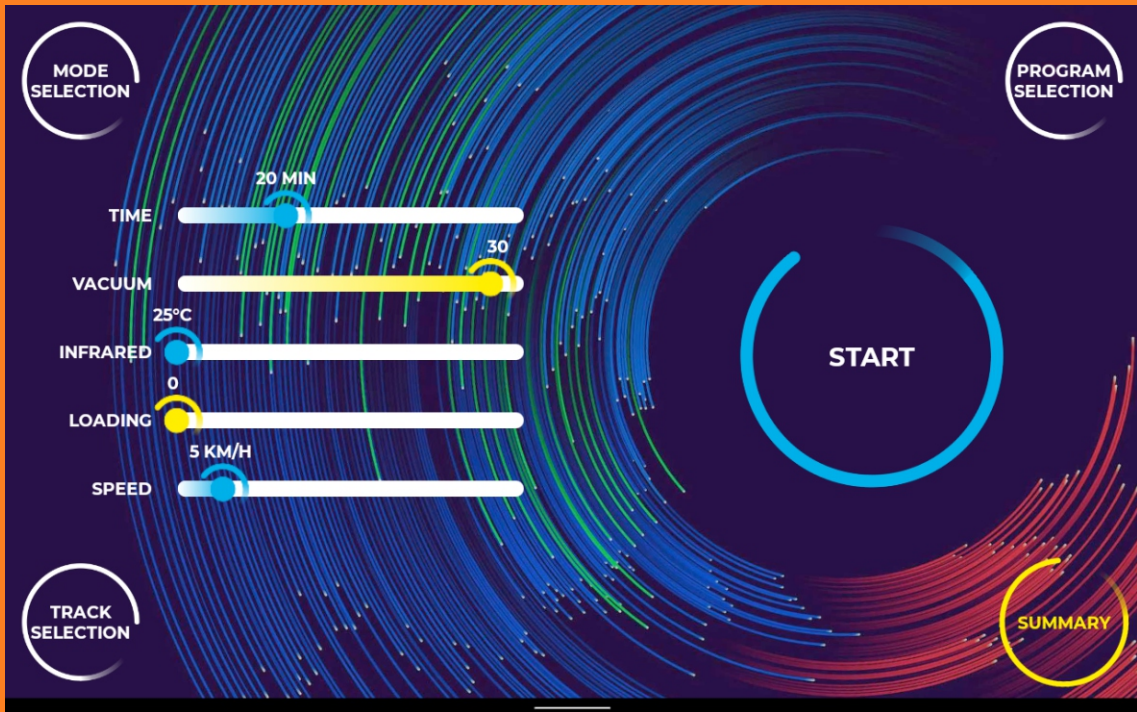




Upload music from sd card, internal storage or usb - choose truck - switch to netflix, tv or facebook

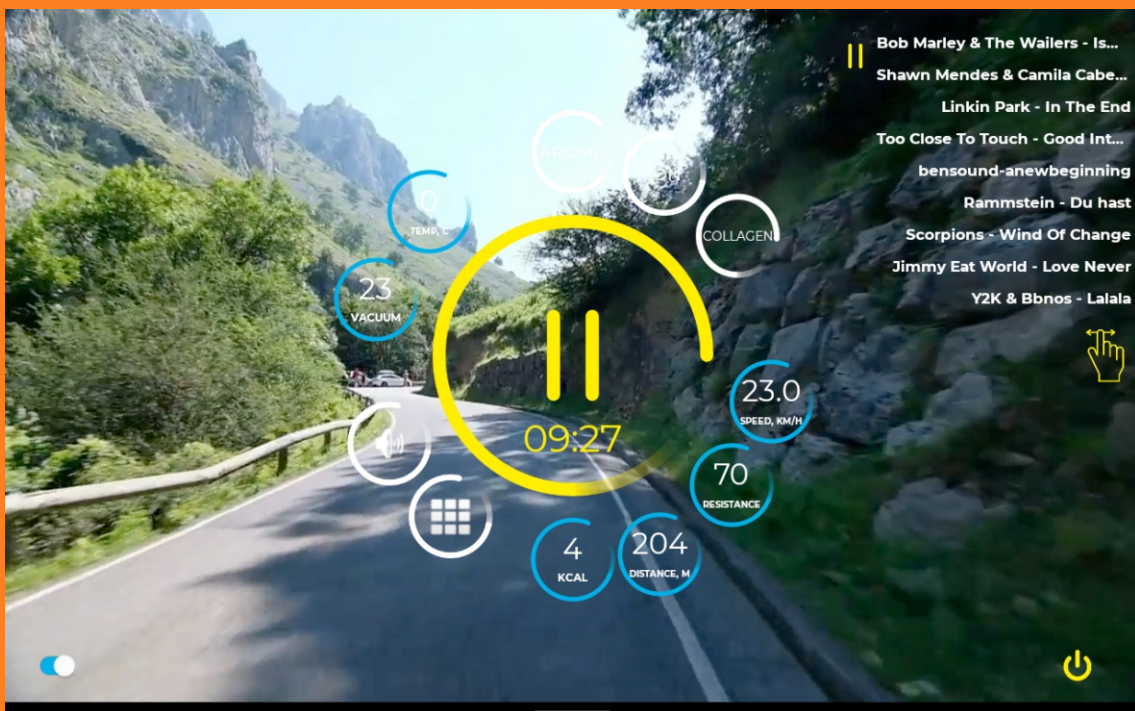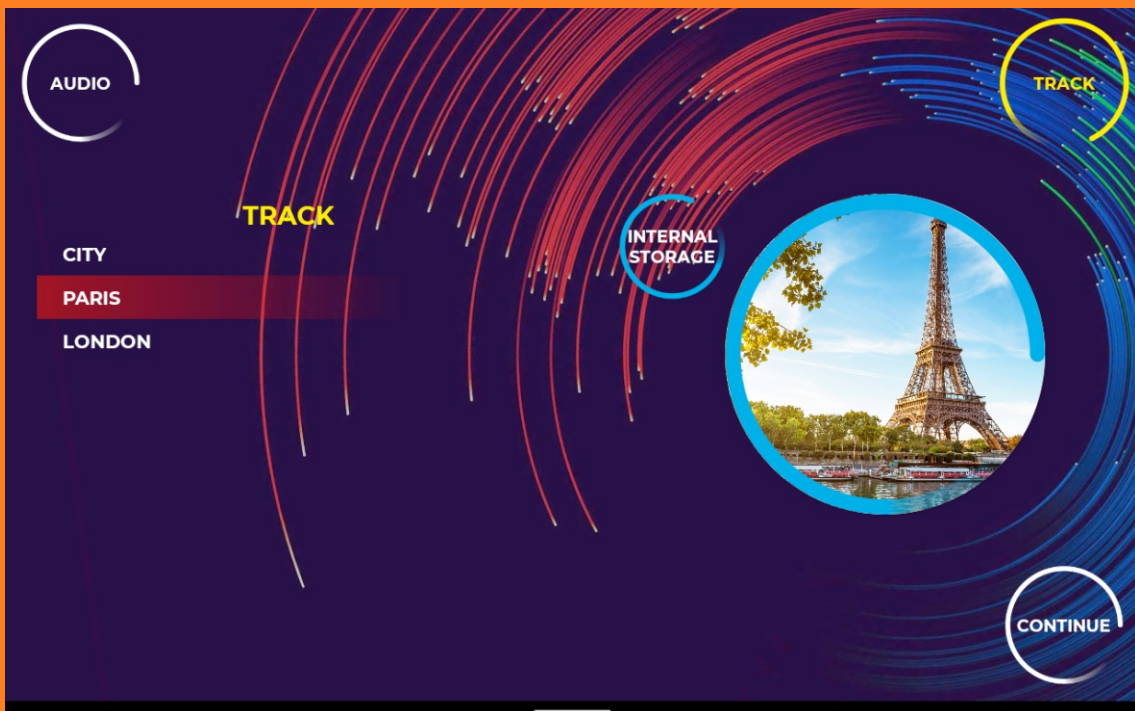

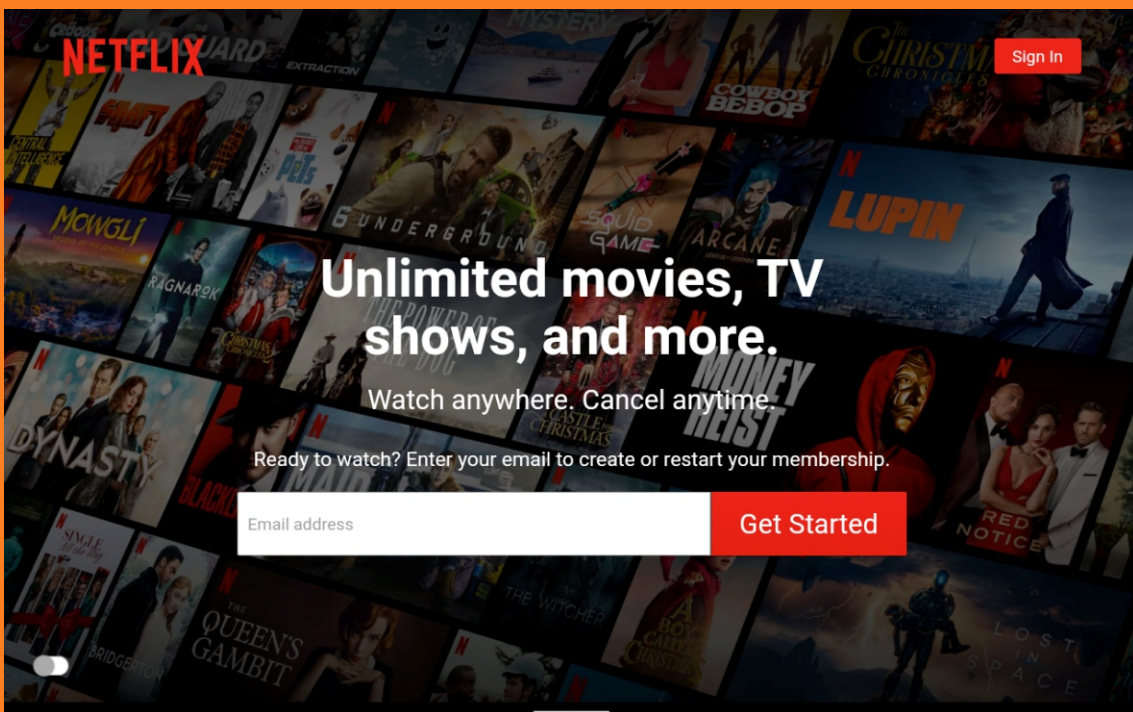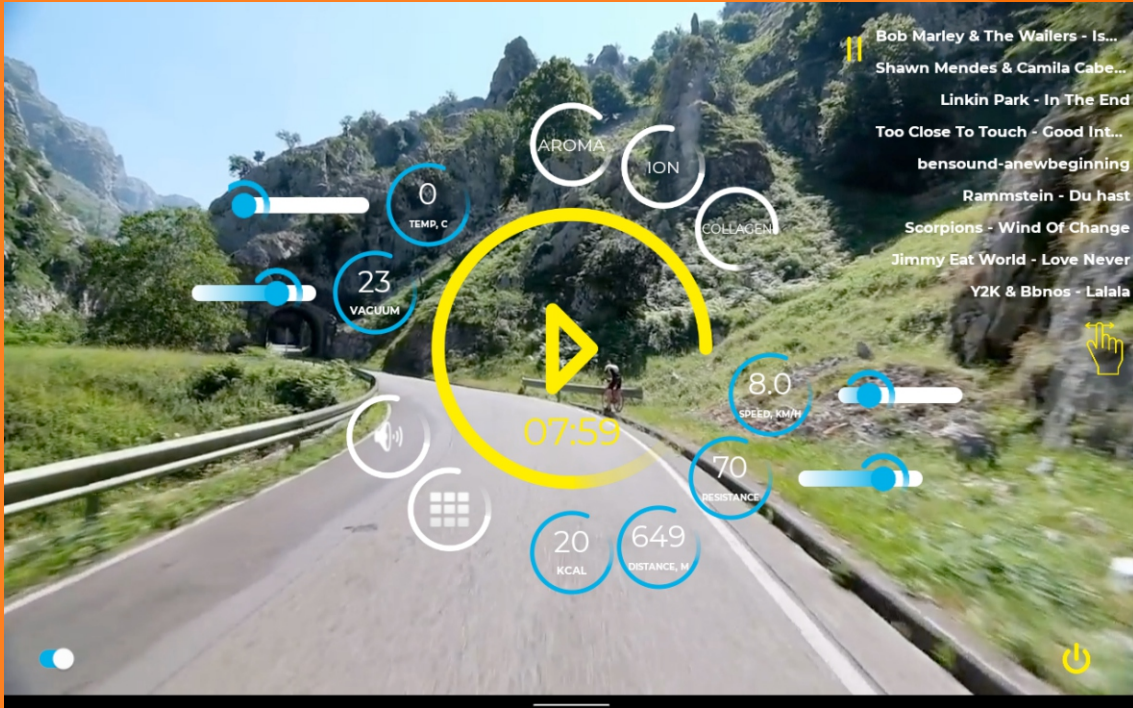




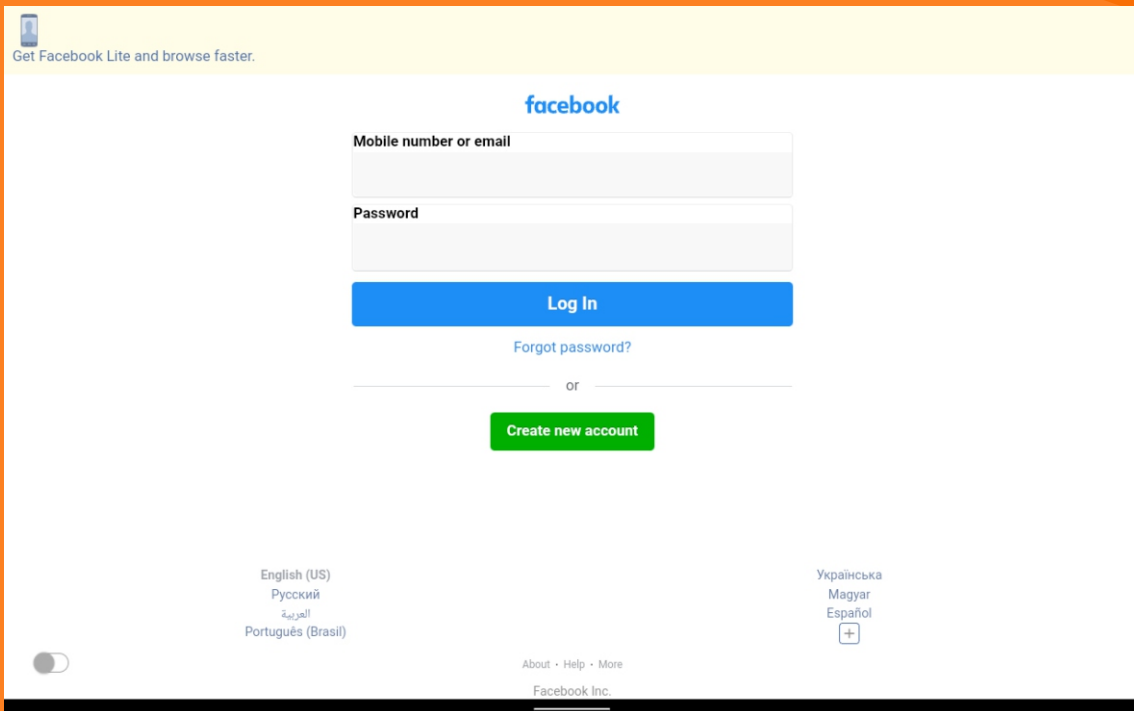


Stop program and get indicated training summary



## Service functions of InfraStar

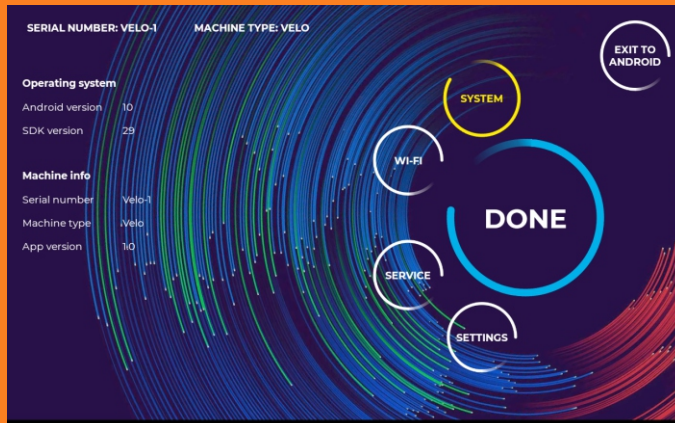

In order to get to the service functions of the device, you need to press [MENU] in the home screen. Some versions have a HIDDEN Button which you need out your finger in right bottom corner of display and hold 3-5 seconds for open HIDDEN menu.

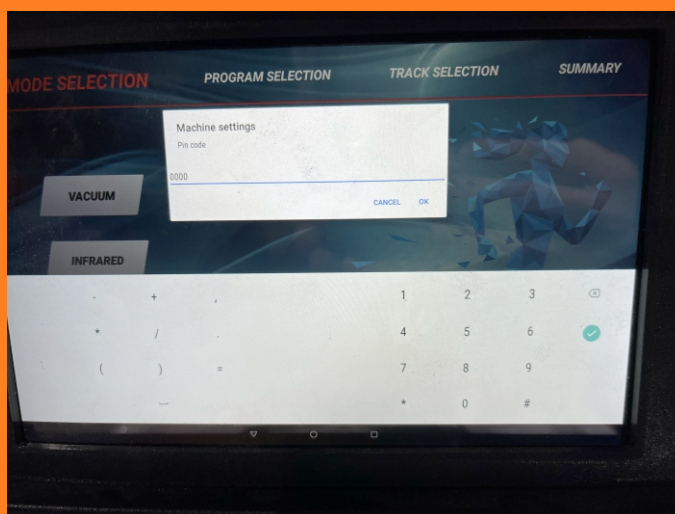


Then [INPUT CODE 0000] screen will be displayed in the first place, then after providing and accepting a correct access code, [MENU] screen will be displayed,

On the [MENU] screen, there is service information:

- System
- wi-fi
- Service
- Settings
- Done for save and exit


### Wi-Fi settings

- Wi-fi network will be indicated automatically
- Choose network
- Insert password
- Connect network

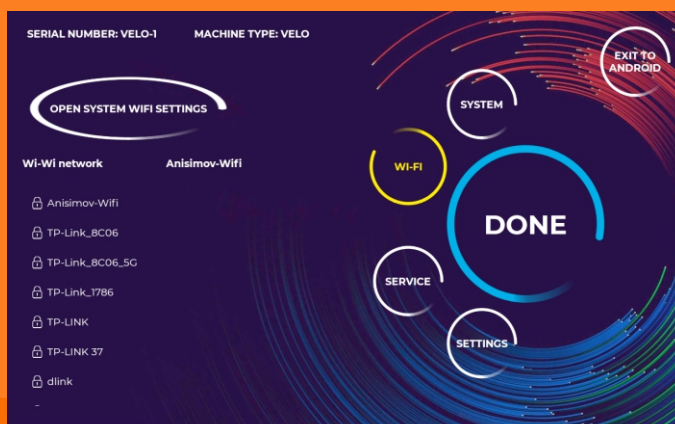


## IMPORTANT NOTICE

If no wi-fi connection over 24 hours, machine will lock operation until internet connection with server restored.

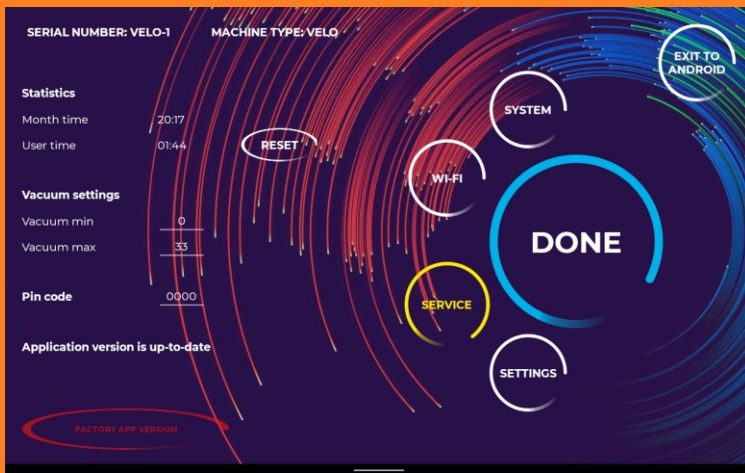

## SERVICE

- Life timers
- Reset current timer
- Vacuum resistance settings
- Put finger on number to change settings
- Change vacuum Min and Max for increase or decrease vacuum pump power
- Do not change PIN code 0000
- Change language
- Change units system Metric Europe/ Imperial USA

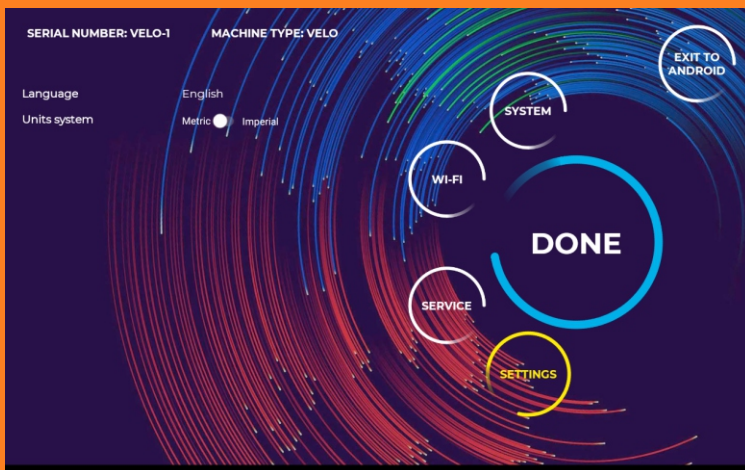



## **Other terms of Operation and Maintenance**

When running the machine, make sure that the machine is used in accordance with these instructions for use and watch the machine for a smooth run. Keep the machine drive clean with special focus on the motor cooling system (remove dust from the fan grille with a vacuum cleaner or by hand in monthly intervals as a minimum) and keep the machine surface clean, especially for hygiene reasons. After every use by a client, wipe the leatherette handles, rotating wood spindles and seats with a damp cloth wetted in a diluted detergent and disinfectant solution. A stronger solution or a special cleaner is recommended for cleaning at the end of the day. All the cleaning detergents must be designed for cleaning wood, laminated boards and leatherette! Instructions for the correct use of the machine for massage are shown in the graphical instructions for use (poster or display screen) and in the textual instructions for exercise. Do not use the product for any purpose other than as described in the instructions for use! The machine must be installed in a dry place and run at +15°C to +35°C. The machine must not be used by children! The machine is fitted with a 100mA fuse located in the main distribution box accommodated inside the machine. Turn the machine upside down to replace it if blown. A blown fuse on its own is not a defect. Repeatedly blown fuses, however, indicate a fault. Call the technician to correct it. Do not forget to unplug the power cord before accessing the distribution box or any other electrical system! The bearings inside the machine contain a permanent lubricant and are closed on both sides. No additional lubrication is required. If the belts require tensioning, do not forget to unplug the power cord before turning the machine upside down! Loose belts are not a defect. The belts may be tensioned by any skilled machine fitter, who will turn the machine upside down and slide the motor or the holders along the grooves so that the distance between the pulleys is increased by approximately 2 mm.

### **Environmental factors**

The machine must be installed on an even surface in a dry place with temperatures between +15°C and +35°C. If the machine is stored for a long time, the greasing and protective coating must be restored from time to time. Attention must be paid to the preservation of the leatherette parts and of the accessories.



## **Contraindications and partial contraindications for which exercise the InfraStar machine is not recommended**

A user with contraindications and/or risk factors must consult the doctor before using the InfraStar fitness bike. Contraindications for InfraStar are same as for any fitness or wellness equipment including:

- Acute infectious disease
- Liver, kidney or heart disease
- Skin cancer, blood and lymphatic system cancer or any other types of cancer
- Inflammation in veins – thrombosis
- Fever including any virus or bacteria infections
- Haemophilia
- Bone tuberculosis

Partial contraindications:

- Pregnancy, menstruation
- Age under 18 (parents supervision or doctor should be consulted)
- Various inflammatory diseases
- Gastric/duodenal ulcers
- Constipation
- Asthma
- Cardiac insufficiency
- Thyroid diseases
- Hypertension
- Screenin



## Screening Questionnaire before commercial use.

VacuStar is a highly effective fitness bike. The operator of VacuStar (or the user, if the device is to be self-applied) must verify prior to the start of treatment that the person who is to be treated with the vacuStar does not suffer from any of the contraindications listed below.

Please carefully examine the list of contraindications and determine that the person to be treated does not have any of these contraindications.

**CONTRAINDICATIONS:** Any pain or numbness, severe arteriosclerosis or other ischemic vascular diseases, unbalanced cardiac insufficiency, known or suspected deep vein thrombosis or thrombophlebitis, gangrene, dermatitis, untreated or infected wounds, severe inflammation of the skin, recent skin grafts.

This questionnaire is to be completed by all clients/users before using RollStar for the first time. This questionnaire may be recorded, photocopied as needed for multiple uses. Please answer the following by circling the correct answer (YES or NO):

Are you under medical treatment for any medical condition at this time? Are you taking medications? Do you suffer from respiratory problems? Do you have epilepsy? Do you have any metal objects in your body? Do you have an implanted electronic device in your body? Do you have circulatory problems in your legs or arms? Do you have a heart condition? Did you have an operation in the last three years? Do you have diabetes or another metabolic illness? Do you have varicose veins? Do you have an open leg ulcer? Do you currently have, or have you ever had in the past, a thrombosis? Do you have a known or suspected deep vein thrombosis or thrombophlebitis? Do you have dermatitis, infected wounds, gangrene, severe skin inflammation, or recent skin grafts? Do you have pain or numbness in any of your limbs? Do you have arteriosclerosis or other ischemic vascular diseases? Do you have unbalanced cardiac insufficiency? Are you pregnant?

In case of possible contraindications or pre-existing risk factors, or when the answer to any of the above questions is YES, the user/client\* must obtain authorization from a physician that they may be treated with InfraStar. \*If VacuStar is to be used in an aesthetic facility, gym or beauty salon, the operator must have the client read entire list of contraindications, warning, cautions and complete and sign the questionnaire, to be kept on file. If the device is for home use, the rental or sales agent must have the user read the entire list of contraindications, warnings, cautions and complete and sign the questionnaire, to be kept in the Agent's files.

If the user/client has NONE of the contraindications for use, AND the answer to all the questions in the Screening Questionnaire is NO, then the user should sign the following declaration.

User/Client Declaration I hereby affirm that I have answered the above questions truthfully to the best of my knowledge and have verified that I have none of the contraindications to using roller®. If there is a change in my condition, I will immediately inform the operator of the roller® device. I hereby affirm that I am treated at my own risk.

Name: \_\_\_\_\_ Signature: \_\_\_\_\_

Date \_\_\_\_\_



## Sample of waiver form for commercial use

You as a client of InfraStar owner (hereinafter "Client") understand that Owner (hereinafter "Studio") is not health care professional, and is not a medical facility. If client suffers from a medical condition or is taking drugs or medication, or is taking skin sensitizing medications , or has undergone skin sensitizing treatments , or suffers from allergies, client acknowledges having obtained medical clearance and consent from client's physician to obtain services at the studio. Client affirm, as current of the studio for which this form is submitted, that has no medical conditions , not pregnant, no mental health conditions which hinder or prevent active referenced activity, and client voluntarily participating as a client of this studio.

Client understand that there exist certain injuries associated with participation in the studio for which this form is submitted, which may include but not limited to broken bones, muscles injuries, heat exhaustion and other similar or related injuries, including death. Client accept the risk for any and all injuries from client's participation, including those injuries that might happen or occur en route to and from client's activity, as well as during the entire participation period of such. Client agree that any damage or loss that may occur to client's vehicle or its contents while in the parking lot is client sole responsibility.

For further consideration and privilege to use studio's treatments and facilities. Client agrees that neither he or she , or his legal representative will make any claim against the Studio or any of it's agents or employees or contractors for any injury, property loss and/or other damages resulting from client's presence and use of the Studio and its related services and products. Client agrees to release and discharge the Studio, its affiliates, its employees, its agents, its representatives, its insurers, and its assigns, from any and all claims or causes of action (known or unknown).

This waiver and Release of liability includes and covers, without limitation, claims for bodily injuries, physical or mental disability, social or economic losses, stemming form or inaction, and negligence of the studio and its agents and employees, action or inactions of third parties, and other harm suffered by Client, all of which can occur as a result from a client's use of any portion of the Studio premises, Studio equipment. Studio services , products or facilities which may become defective, malfunction or break, dangerous and unsafe conditions, including extreme heat, extreme humidity, slippery surfaces and floors, which include the presence of water, soap, oils, stones, and chemicals present at the Studio's on-site and off-site locations. Despite being aware of the risks involved on the use of the Studio, its facilities, its services, client voluntarily desires and agrees to use the Studio, its products and services.

Client assumes all foregoing risks and accepts personal responsibility for any harm and damages following such bodily injury, disability or death. To the extent necessary, client agrees to defend, indemnify and/or hold harmless the Studio and its affiliates, employees, agents, representatives, successors and assigns from any claim or legal action related to client's use of the Studio which maybe asserted or brought against the Studio, its affiliates, employees, agents, insurers representatives, successors and assigns. Client is waiving any right that client may have to bring a legal action to assert a claim against the Studio for negligence. Any lawsuit by client against Studio shall be filed solely in the State of owner based, and client agrees that the substantive State law and procedure of State shall apply to any such legal action without regard to the conflict of law rules in the State. Should Studio be required to incur attorney's fees and costs to enforce this agreement, Client agrees to indemnify Studio for all such fees and costs.

Client agrees that any portion of this agreement is found to be void or unenforceable, the remaining portion shall remain in full force and effect. If for some reason you feel dissatisfied you may choose to end service within the first 5 min. without charge. Otherwise, you are responsible to pay a full amount of the service.

Client acknowledges having carefully read the foregoing release and agreement, and understands the contents thereof and that client is signing this release and agreement under his/her own free will and it is client's intention to be legally bound hereby.

Print Client's Full Name: \_\_\_\_\_

Client Signature: \_\_\_\_\_

Client Address: \_\_\_\_\_

Telephone Cell: \_\_\_\_\_ Home \_\_\_\_\_

E-mail: \_\_\_\_\_ Today Date: \_\_\_\_\_





## **Limitation liability of manufacturer**

Manufacturer or sales representative shall not be a party of any law cases for customers or third parties. Owner of machine is using it on it's own risk and liability. Buyer of VacuStar agrees that neither he or she , or his legal representative will make any claim against the manufacturer or any of it"s agents or employees or contractors for any injury, property loss and/or other damages resulting from client"s presence and use of equipment and its related services and products. Client agrees to release and discharge the Manufacturer or sales representative, its affiliates, its employees, its agents, its representatives, its insurers, and its assigns, from any and all claims or causes of action (known or unknown). This waiver and Release of liability includes and covers, without limitation, claims for bodily injuries, physical or mental disability, social or economic losses, stemming form or inaction, and negligence of the manufacturer and its agents and employees, action or inactions of third parties, and other harm suffered by Client, all of which can occur as a result from a client"s use of any portion of the equipment usage. Client must maintain and control equipment condition and facilities where equipment placed due it may become defective, malfunction or break, dangerous and unsafe conditions, including extreme heat, extreme humidity, slippery surfaces, which include the presence of water, soap, oils, stones, and chemicals present at the equipment company on-site and off-site. Despite being aware of the risks involved on the use of the equipment, its facilities where it based, its services, client voluntarily desires and agrees to use the equipment and provide commercial and home services/ exercises on his own risk.

Client assumes all foregoing risks and accepts personal responsibility for any harm and damages following such bodily injury, disability or death. To the extent necessary, client agrees to defend, indemnify and/or hold harmless the Manufacturer and its affiliates, employees, agents, representatives, successors and assigns from any claim or legal action related to client's use of the Studio which maybe asserted or brought against the manufacturer, its affiliates, employees, agents, insurers representatives, successors and assigns. Client is waiving any right that client may have to bring a legal action to assert a claim against the Manufacturer or his representative for negligence. Any lawsuit by client against Manufacturer shall be filed solely in the State of manufacturer based, and client agrees that the substantive State law and procedure of State shall apply to any such legal action without regard to the conflict of law rules in the State. Should manufacturer be required to incur attorney's fees and costs to enforce this agreement, Client agrees to indemnify Manufacturer for all such fees and costs. Client agrees that any portion of this agreement is found to be void or unenforceable, the remaining portion shall remain in full force and effect.

- Basic risks for the users of the InfraStar :
- Risk of falling out of the user from the equipment during the exercises ;
- Risk of suffocation;
- Risk associated with the possibility of fall when exercising using accessories as bench or pillow
- Skin burns after too long exposure to high temperatures or moving rollements;
- Skin burns, body injuries due pinching into rolling parts
- Electric shock.
- Injuries of bones and hard parts of the body. Avoid contact of hard parts of the body with the moving roller. Only soft parts of the body can be involved in the activity.

## Other manufacturer customer safety suggestions and Warnings

The customer must remove all piercing or rings or other metal body decoration. Also manufacturer recommends to remove all metal parts from body including the watch and finery. Use only conformable sport uniform and dressing and shoes. Remove shoes when exercise o the feet. The customer should not use any cream or lotion before the session. It is strongly recommended to remove any cream he/she may have used on the body, especially on the legs. Sweating is not a problem. Keep equipment disinfected after each session and customer. Color clothes may dye equipment parts.

## Manufacturer label

The machine has label on back side of machine near the electrical cable connection. The nameplate contains the data as follows:

- Manufacturer's name and address;
- Manufacturer's representative name and address
- Model and version;
- Serial number
- Country of origin (made in)
- Consumption power (Volts, kW and Ampers)
- Year of production
- Warning notice regarding Hazardous
- Recycling notice
- Certification signs

|  |  |  |   |
|--|--|--|---|
| <b>Producent:</b><br>Medstar-Com LLC<br>1 Akademika Starodubova Sq, Dnipro, 49050, Ukraina<br><b>Upoważniony przedstawiciel:</b><br>Ar Group Roman Tchir<br>Ostrów 621, 37-700 Przemysł, Polska                            |  |   |   |
| Nazwa: <b>Bieżnia ciśnieniowa do odchudzania</b><br>Model/Typ: <b>VacuStar</b><br>Napięcie zasilania: 230 V, Częstotliwość: 50 Hz<br>Moc: 1800 W, Prąd: 8 A<br>Numer seryjny: <b>XXX-XXX</b><br>Rok produkcji: <b>RRRR</b> |  |   |  |
|    |  | <b>UWAGA!</b><br>NIEBEZPIECZNE NAPIĘCIE<br>WEWNĄTRZ URZĄDZENIA!<br>Należy odłączyć produkt<br>od gniazda zasilania przed<br>rozpoczęciem serwisowania. |   |
|  7 84672 10482 1  |  |  |   |

### DEKLARACJA ZGODNOŚCI UE



**Produkt:** Bieżnia ciśnieniowa do odchudzania  
**Model/Typ:** VacuStar  
**Producent:** Medstar-Com LLC  
**Adres producenta:** 1 Akademika Starodubova Sq, Dnipro, 49050, Ukraina  
**Numer seryjny:** XXX-XXX

Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta.

**Przedmiot deklaracji:** Bieżnia ciśnieniowa VacuStar do odchudzania.

Określony powyżej przedmiot niniejszej deklaracji jest zgodny z odnoszonymi wymaganiami unijnego prawodawstwa harmonizacyjnego:

2014/30/UE Dyrektywa Parlamentu Europejskiego i Rady 2014/30/UE z dnia 26 lutego 2014 r. w sprawie harmonizacji ustawodawstw państw członkowskich odnoszących się do udostępniania na rynku sprzętu elektrycznego przewidzianego do stosowania w określonych granicach napięcia

2014/35/UE Dyrektywa Parlamentu Europejskiego i Rady 2014/35/UE z dnia 26 lutego 2014 r. w sprawie harmonizacji ustawodawstw państw członkowskich odnoszących się do udostępniania na rynku sprzętu elektrycznego przewidzianego do stosowania w określonych granicach napięcia

2006/42/WE Dyrektywa Parlamentu Europejskiego i Rady 2006/42/WE z dnia 17 maja 2006 r. w sprawie maszyn, zmieniająca dyrektywę 95/16/WE (przekształcenie)

Urządzenie zostało wyprodukowane zgodnie z normami:

EN 60335-1:2012/A13:2017, EN 60204-1:2018, EN 61000-3-2:2014, EN 61000-3-3:2013

Deklaracja ta odnosi się wyłącznie do produktu w stanie, w jakim został wprowadzony do obrotu i nie obejmuje części składowych dodanych przez użytkownika końcowego lub przeprowadzonych przez niego późniejszych działań. Dokumentacja techniczna jest do dyspozycji w upoważnionego przedstawiciela.

Podpisano w imieniu producenta przez:

**Upoważniony przedstawiciel:** AR GROUP Roman Tchir

**Adres:** Ostrów 621, 37-700 Przemysł, Polska

**Imię i Nazwisko, Stanowisko:** Roman Tchir, Właściciel

**Miejsce i data wydania:**

Ostrów, DD/MM/RRRR

**Podpis:**



## Manufacturers guarantee

The Manufacturer's guarantees performance of the machine in conformity with the technical characteristics specified in the Acceptance Certificate under the condition that the Customer has fully complied with the requirements to transportation, handling, installation, operation and storage defined herein and in the sales and shipment agreements. The warranty period for the machine is a 12 months from the date of commissioning indicated in manufacturer data base, but no more than 18 months from the date of shipment to the end user, or completed 2,000 sessions on equipment, whatever comes first. Warranty does not cover treadmill belt and treadmill rolls replacement. The VacuStar should be used only under the specified conditions and for specific application. Any other application is considered to be nonconforming, and, therefore, hazardous. Any liability on the part of the Manufacturer under the present Contract or beyond it for the mistakes made during operation or in any case of non-observance of the Manufacturer's requirements is excluded. If during the warranty period any unit or assembly fails through the Manufacturer fault, the Consumer is entitled for free repair, during which all the defects are to be eliminated, units and assemblies which failed during transportation or operation are replaced.

The Manufacturer's guarantee policy is excluded and free after-sales service of the cryotherapy chamber is not performed in the following cases:

- A) The machine bears evidence of attempted unqualified, unauthorized repairs;
  - machine was assembled or repaired by non-authorized by manufacturer personal
- B) The Goods are evidence of any mechanical damage;
- C) The defect is caused by improper usage, installation or maintenance
- D) The revealed defects are caused by foreign objects, matter, liquids, insects, animals and so on found out in the machine.
- E) Failure to observe the equipment operation modes referred in present manual.
- F) If the damage was caused by force-majeure circumstances, i.e. power supply failures, lightning, fire, flood etc.

More information regarding warranty terms indicated on manufacturer's web page [www.medstarcom.com](http://www.medstarcom.com) or [www.vacuactivus.com](http://www.vacuactivus.com)

## Warranty card

Date of sales \_\_\_\_\_

Model \_\_\_\_\_

Serial number \_\_\_\_\_

\_\_\_\_\_ MP Signature



**Manufacturer department MedStar-Com LLC Address: 1 Akademika Starodubovsq, Dnipro, Ukraine, 49050 T +380 67 3701200**



**HeadquartersSales company: Slim Wellness Studio LLC DBA VACUACTIVUS Address: 510 N Orlando Ave Suite 307 West Hollywood CA 90048 USA T +1 310 4679723**



**Authorized representative in EU: AR GROUP Roman Tchir Ostrów 621, 37-700 Przemyśl Poland +48 513 291 041**



**Authorized representative in Russia: INTER LLC Address: Krasnij Prospekt street, building 153A, office 32, Novosibirsk city Russian Federation 630049T +7 495 128 3922**



**Technical support request: [vacuactivus@gmail.com](mailto:vacuactivus@gmail.com)**



**Worldwide sales UK: +44 20 3289 1959 Australia: +61 73 103 3833 [vacuactivus@gmail.com](mailto:vacuactivus@gmail.com)**